## MX5 EV14 Kit Fitting instructions

## Contents:

- 4x EV14 injectors with pre-installed top hat adapters and lower seals
- 4x Denso-EV14 harness adapters
- 3x fuel rail spacer washers

## Fitting:

- 1. Remove existing injectors from the engine. Note the lower seals often get stuck in the head/manifold and should be removed
- 2. Connect a harness adapter to each injector
- 3. Lubricate the injector o-rings. Vaseline / petroleum jelly is ideal but most lubricants will work.
- 4. Push the injectors into the fuel rail
- 5. Apply a very small amount of grease to the lower injector seals to improve sealing (optional)
- 6. Place a fuel rail spacer washer on top of the OEM fuel spacers
- 7. Lower the fuel rail and injector assembly into position
- 8. Carefully check that each injector is properly seated. DO NOT push down on the fuel rail. When aligned correctly, the lower seals will push in with very little force.
- 9. Bolt down the fuel rail to the OEM torque spec (14-19ftlb)
- 10. Connect to the ECU through MEITE and set the injector size in the injection driver
- 11. Set the injector dead times (Injection -> Inj. Dead time) as per the tables below:

## Injector dead time data (640cc)

Injector dead time data (5)	50cc, 380cc)
-----------------------------	--------------

Batt. Voltage	Inj. Dead Tim
6	5.5
7	4.2
8	3.19
9	2.32
10	1.87
11	1.57
12	1.35
13	1.15
14	1.01
15	0.9
16	0.83
17	0.79

Batt. Voltage	Inj. Dead Tim
6	4.38
7	3.34
8	2.53
9	1.84
10	1.48
11	1.24
12	1.06
13	0.9
14	0.79
15	0.7
16	0.64
17	0.61

Note: Fuel (VE) table tuning is normally required after a change of injectors. We offer a <u>remote tuning service</u> to adjust and fine tune the VE table as required.